

Transporting Portalift and Econolift Hoists



Lift the cradle off the lower limit switch. The cradle should be supported and/or strapped to the hoist leg to prevent cradle movement over rough terrain.

If the hoists are not being transported over rough terrain or long distances, lifting cradle off the lower limit switches is enough.

This applies to both, Portalift and Econolift Hoists



On Portalifts, the chains need to be strapped in two places, close to the rollers, to prevent the chains slapping about and possibly jumping off the rollers.

WARNING:
The hoists are TOP HEAVY.

Lift from underneath or from the lifting lugs on the head plate. You should avoid using a car trailer where the hoists are loaded/offloaded on a ramp.

Use carpet to pack around the legs to prevent damage to paint during transport.

Portalift Paint Colour for touch ups: White Knight, HARVEST.

For detailed information please contact Endurequip Services.

ENDUREQUIP SERVICES

Mb: 0431 715 702

Ph: 1800 028 904

service@endurequipservices.com.au